

Warning

Unplugging the flashID USB device

Before you unplug the flashID device from a computer you must first stop the device by double-clicking on the **Safely Remove Hardware** icon located on the right hand side of the taskbar.



When prompted make sure you click on the correct device (in this case Drive F:) – below



When you see the **Safe To Remove Hardware** message (below) you may safely remove the device from the computer.



This procedure is essential because Windows uses write caching features. Safely removing the hardware ensures that files are properly in place before Windows allows you to unplug the device.

Failure to follow this procedure can result in corruption of files and may invalidate your warranty.